


/ Boccole guida barra GILDEMEISTER

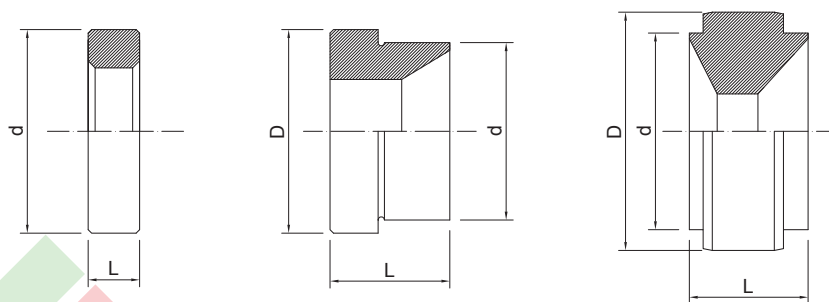

CODICE	DESCRIZIONE	DIMENSIONI			ALESAGGIO MAX		
		d	D	L	Tonde	Esag.	Quadre
T1101900	AS12	19	-	10	12	11	8
T1102850	AS16/20 GS/GM20	28,5	-	10	25	22	18
T1102851	AS16/20 GS/GM20 car.	25	28,5	25	20	17	14
T1101851	GM16 AC	16	18,5	18	13	10	9
T1101850	GM16 AC	18,5	-	12	16	14	11
T1103020	AS25	26,3	30,2	8	25	22	18
T1104381	AS25	33	43,8	27	24	22	18
T1103203	GM26 AC	32	37,5	36	26	22	18
T1103600	GS25 VARIANTE 32	32,5	36	44	32	27	22
T1103590	AS/GS32	32,7	35,9	9	32	27	22
T1104380	AS/GS32	33	43,8	27	32	27	22
T1104201	GM35	42	47,8	43	35	30	24
T1104700	AS/GS/GM42	47	52	43	42	36	29
T1105190	AS48	49,7	51,9	16	48	42	34
T1105750	AS48	49	57,5	35	48	42	34
T1107200	AS67	67,9	72	17,5	67	58	47
T1107201	AS67	68,7	72	23	67	58	47
T1108000	AS67	68	80	52	67	58	47
T1108610	AS80	83,5	86,1	28	80	69	56
T1109150	AS80	83	91,5	62	80	69	56